

Maintenance Kit Installation Instructions

HP LaserJet 8100 & 8150

The following parts are included in your Maintenance Kit – C3914-69001

Fuser Assembly	RG5-6532
Transfer Roller	RF9-1394
Feed/Sep Rollers	RF5-1834

*RG5-6533 Fuser Assembly 220 Volts

* * * **ATTENTION** * * *


Turn off printer, unplug, and allow it to sit for 30 minutes before performing any of these maintenance procedures.

Approximately 350,000 Pages at 5% Coverage

Fuser Removal & Installation:


Removal:

- 1) Open the left door. If a paper handling output accessory is installed, reposition it so that the left door is fully accessible.
- 2) If the duplex unit is installed, remove it by pushing down on the green tab and sliding it out. Figure 1: Removing the duplexer.
- 3) Release the fuser by rotating the levers down. Be sure to release the fuser by the two large blue levers, not the gray levers.
- 4) Remove the fuser by lifting up on the finger handles slightly while pulling the fuser out of the printer.

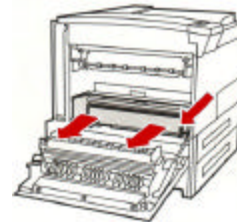

Installation:

- 1) Remove the two orange packing spacers (one on each side from the new fuser) Figure 2: Removing the orange spacers.
- 2) Slide the new fuser firmly into the printer. Ensure that the fuser is pushed into the printer beyond the "lip" of its supporting frame and is completely seated.
- 3) Rotate both large, blue levers up to lock the fuser in place. Repeat Step 2 if the levers do not rotate.
- 4) Install the duplex unit if you removed it earlier, and then close the left door.

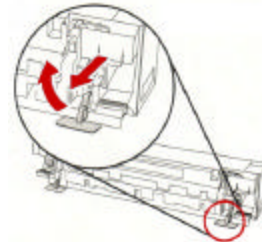

Feed & Separation Rollers Replacement:

- 1) Open Tray 2 & pull it out until it stops.
- 2) Remove the tray by lifting the outer end while pulling the tray free of the printer. For tray 3, repeat Steps 1 & 2.
- 3) Access the feed and separation rollers through the empty paper tray slots (Two rollers per tray)
- 4) Access Pinch the protruding tabs and slide each roller off the shaft. See Figure 3: Sliding off the shaft.

